

SUNWAY® II

Euro Electronic Calculator (12 Digits)

User's Manual

EURO ELECTRONIC CALCULATOR

A. MAIN KEY FEATURES

- CE** : Clear error.
- AC/ON** : Clear All/power on.
- ▶** : Shift right key.
- M+** : Memory plus key.
- M-** : Memory minus key.
- MRC** : Memory recall/Memory clear.
- %** : Percent key.
- 00** : Double zero key.
- SET** : Exchange rate set key.
- STORE**
- ▶EU** : EURO – conversion key.
- RECALL**
- ▶HC** : LOCAL – conversion key.

1. Common calculation examples

Examples	Operation	Display
100 + 50 - 30 = 10 x 20 ÷ 0.5 =	AC/ON 100 + 50 = 150 10 x 20 = 200 200 ÷ 0.5 = 400	0. 120. 400.
1234567890 x 66666 =	1234567890 x 66666 = CE	ERROR 82.3037029547 82.3037029547
• 10% of 1500 • 5% add-on of 1500 (1500 + 5% =) (1500 - 5% =) • Percentage of 20 against 500	15 00 x 10 % 15 00 + 5 % 15 00 - 5 % 20 ÷ 5 00 %	150. 1575. 1425. 4 (%)
368 + 97 + 97 = 839 - 47 - 47 - 47 = 5 ⁻⁴ = 22.5 ³ =	368 + 97 = 465 465 + 97 = 562 839 - 47 = 792 792 - 47 = 745 745 - 47 = 698 5 ÷ 5 = 1 1 ÷ 5 = 0.2 0.2 ÷ 5 = 0.04 0.04 ÷ 5 = 0.008 0.008 ÷ 5 = 0.0016 22.5 x 22.5 = 506.25 506.25 x 22.5 = 11390.625	562. 698. 0.0016 11'390.625
5 X 6 = 5 X 8 =	5 x 6 = 5 x 8 =	30. 40.
9 ÷ 3 = 6 ÷ 3 =	9 ÷ 3 = 6 ÷ 3 =	3. 2.
25 x 5 -) 84 ÷ 3 +) 68 + 17 182	AC 25 x 5 M+ 84 ÷ 3 M- 68 + 17 M+ MRC MRC	MEMORY 125. MEMORY 28. MEMORY 85. MEMORY 182. 182.

Examples	Operation	Display
123478 + 5 =	123456 ▶ ▶ 78 + 5 =	123'456. 1'234. 123'478. 123'483.
456 + 378 =	456 + 345 CE 378 =	0. 834.

2. Euro

Examples	Key operation	Display
SET RATE	8 SET	8. RATE
	▶EU	8. RATE
RECALL RATE	SET ▶HC	8. RATE
	100	100.
	▶EU	€ 100.
	▶HC	HOME 800.
	800	800.
	▶HC	HOME 800.
	▶EU	€ 100.

356000006020Y